


Are you Done?

After acquiring your data, please **export it** to the server and **delete it** from the computer
 Prepare new **CLEAN** and **WATER+AZIDE** tubes
 Start the **cleaning procedure** and **record the cleaning steps** in FACSDiva:

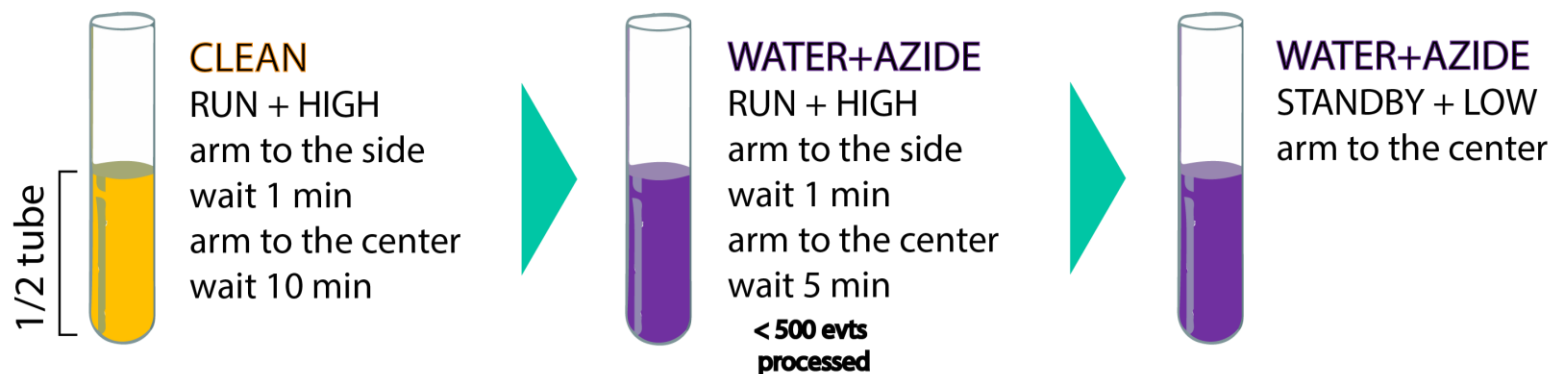

record the cleaning steps



Turn off all the lasers on the BD Coherent Connection 4.
 Log off from FACSDiva and Windows
 Refill the sheat tank with PBS + Azide
 Replace the waste reservoir, in case it gets full.

Thank you!