


Are you Done?

After acquiring your data, please **export it** to the server and **delete it** from the computer
Prepare new **CLEAN** and **WATER+AZIDE** tubes
Start the following **cleaning procedures** and **record the cleaning steps** in SpectroFlo:

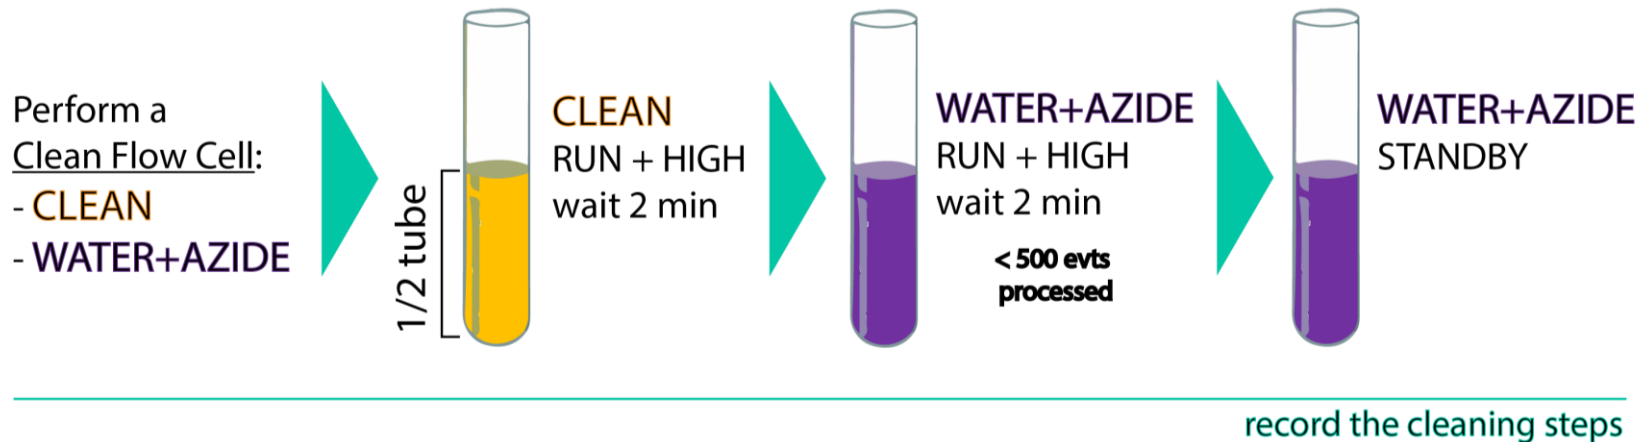

Sign Out from SpectroFlo and leave the software open
Refill the sheat tank with PBS + Azide
Replace the waste reservoir, in case it gets full.

Thank you!